



Build Up

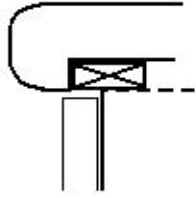

If your doors come to just under the countertop, build up is required

If there is a space between the cabinet and counter edge, no build up is needed

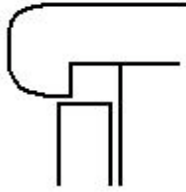

Build up required?



Yes




No

Port Cut Countertops


When ordering Port cut for vanity installation, ensure that the cabinet is tall enough to allow access to the toilet tank



Profiles

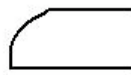

Angled



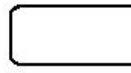


Square







Rounded

Counter/Vanity Top

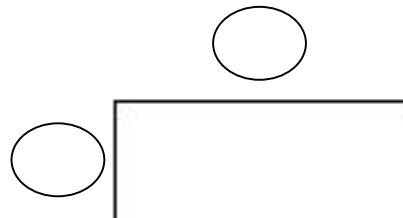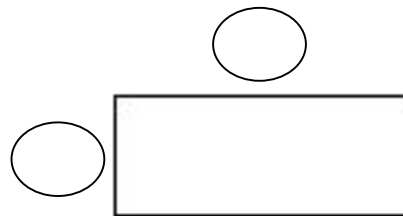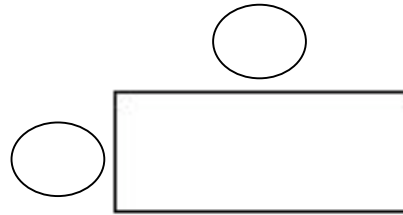

Countertops cont.

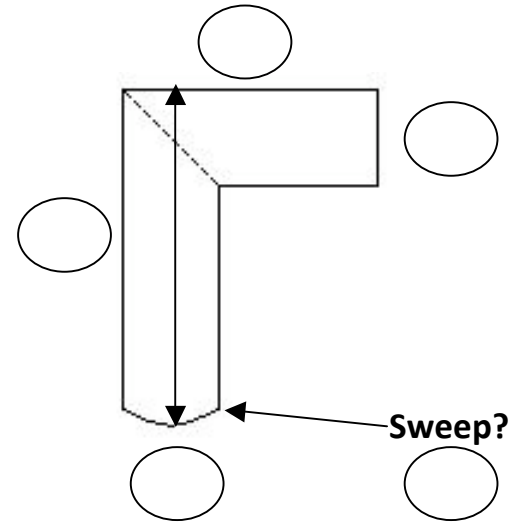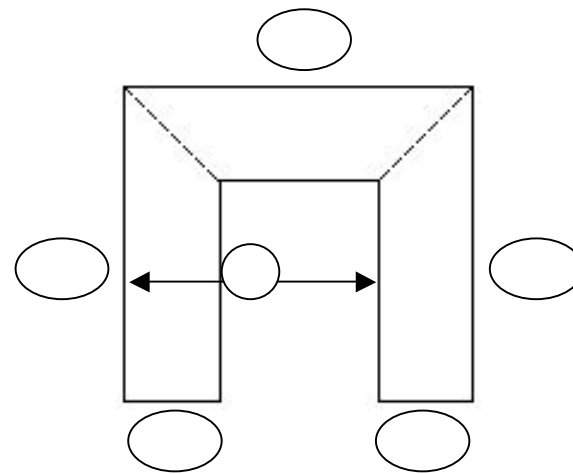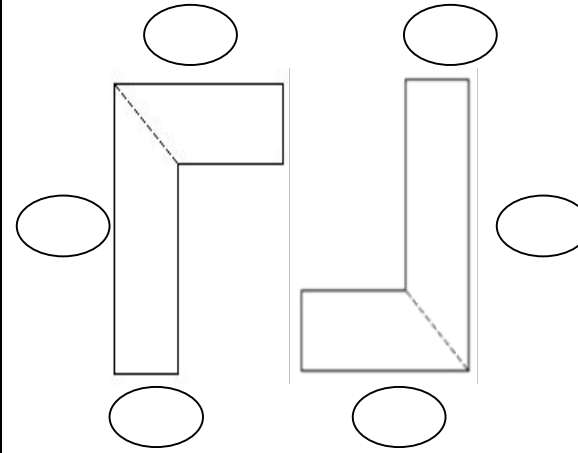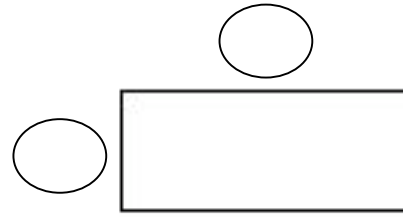

Remember to measure to the furthest point of the sweep to get the proper counter length